
 
 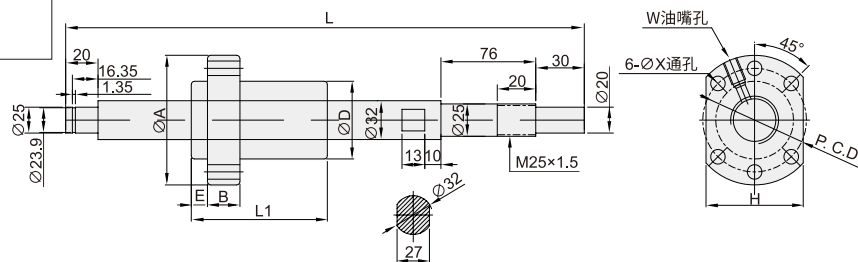
 
 


花键/支座组件
滚珠丝杆



代码	丝杆轴径	导程	支座形状	推荐丝杆固定座	推荐丝杆支撑座
HAC71	32	5 10 20 32	圆法兰	HAB01-25	HAB11-25
HAC72			方形	HAB21-25	HAB31-25

代码	技术说明																		
HF	取消固定侧轴端扳手位	选型方法 LF																	
HG ()	增加固定侧轴端键槽 	选型方法 HG15 ●最小单位1 ●键槽宽<HG值≤30 <table border="1"> <thead> <tr> <th>P</th><th>b</th><th>t</th><th></th></tr> </thead> <tbody> <tr> <td>11~12</td><td>4</td><td>2.5</td><td></td></tr> <tr> <td>13~17</td><td>5⁰_{-0.03}</td><td>3</td><td>+0.1 0</td></tr> <tr> <td>18~20</td><td>6</td><td>3.5</td><td></td></tr> </tbody> </table>		P	b	t		11~12	4	2.5		13~17	5 ⁰ _{-0.03}	3	+0.1 0	18~20	6	3.5	
P	b	t																	
11~12	4	2.5																	
13~17	5 ⁰ _{-0.03}	3	+0.1 0																
18~20	6	3.5																	
HH ()	增加固定侧轴端键槽 	选型方法 LH7-S2 ●最小单位1 ●HH值+S值≤30, 键槽宽<HH值 <table border="1"> <thead> <tr> <th>P</th><th>b</th><th>t</th><th></th></tr> </thead> <tbody> <tr> <td>11~12</td><td>4</td><td>2.5</td><td></td></tr> <tr> <td>13~17</td><td>5⁰_{-0.03}</td><td>3</td><td>+0.1 0</td></tr> <tr> <td>18~20</td><td>6</td><td>3.5</td><td></td></tr> </tbody> </table>		P	b	t		11~12	4	2.5		13~17	5 ⁰ _{-0.03}	3	+0.1 0	18~20	6	3.5	
P	b	t																	
11~12	4	2.5																	
13~17	5 ⁰ _{-0.03}	3	+0.1 0																
18~20	6	3.5																	
HJ ()	增加固定侧轴端平面(1处) 	选型方法 HJ10 ●最小单位1 ●5≤HJ值≤30																	
HK ()	增加固定侧轴端平面(2处) 	选型方法 HK10 ●最小单位1 ●5≤HK值≤30																	

